



CLEANING INSTRUCTIONS

Acrylic Cleaning Instructions

- 1) Dampen a soft cloth With Cleaner
- 2) Wipe Walls and Tub paying attention to all seams
- 3) Rinse well with clean warm water.

DO USE: Glass Plus, 409, Fantastic, Scrub Free Soft Scrub, Vinegar & water, 10% Bleach/90% Water or KaBoom

DO SCRUB: With a sponge safe for non-stick cookware or use a soft brush on slip resistant bottom.

DO NOT USE: Anything that is not safe for Acrylic – Read Labels– Chemicals that should not be used include, but are not limited to: Shower Kleen, Dow Disinfectant cleaner, Lysol Disinfectant Cleaner, Lestoil, Tough Act, acetone, and fingernail polish remover, any product that is ‘left-on’ the acrylic, aerosol propellants (Dow Scrubbing Bubbles), Ammonia-D (Some Windex Products), scouring pads, Powered or crystal drain cleaners OR ANY PRODUCT WITH AMMONIA IN IT – **THESE WILL ALL VOID YOUR WARRANTY.**

General Cleaning Information:

Less is Best- Clean the bathing area with a soft cloth and warm water. Rinse thoroughly after cleaning. If necessary to soften water minerals, use a solution of vinegar and water. There is no need to use a scrubbing pad or abrasive cleaners (They will dull the gloss finish)

Acrylic is non-porous -Acrylic will not support the growth of mold or mildew and the matching silicone has a mildewcide in it. **HOWEVER, if soap scum, protein, etc. is NOT cleaned out of the corners regularly, heat and humidity will assist in the growth of mold. The mold/mildew will STAIN the silicone and WILL NOT scrub out.** If mold stains appear, call NEW BATH to re-seal the seams. There is a small fee for this service, but the beauty is back in no time!

Acrylic can be Repaired- Light scratches or abrasions can be repaired with the Novus repair kit (from NewBath) or Mirror Glaze Professional Formula #17, which is a product generally available at local automotive stores. If trying another polishing wax or compound, as with any other non-listed cleaner, test it in a corner of the skirt and follow manufacturer's instructions.


NOTE: Cigarette or Cigar smoking near the silicone in the first 48 hours after installation can discolor the silicone and void warranty.

Slow Drain Instructions:

Slow Drain –Remove the Drain Plug by:

1. Pushing it down into the closed position
2. Turn the knob counter-clockwise with pliers.
3. Carefully turn the peg counter-clockwise with pliers and remove it along with the drain plug.
4. Remove obstructions clogging the crossbar.
5. Re-install reversing steps 1-4.

Clogged Drain- remove the drain plug. Apply a LIQUID drain cleaner sparingly, directly into the drain through a funnel. Make sure it does not contact the acrylic; it will boil and crack and will void your warranty.

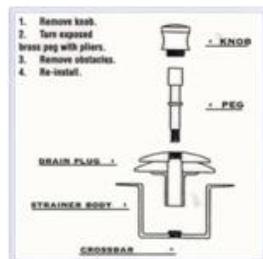

Call 1-877-NEW-BATH WITH ANY QUESTIONS!